


Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi



Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 Upute za rad
 Manual de operatii
 Treoracha Oibriúcháin
 Οδηγίες χρήσης
 El Kitabı
 Инструкции за експлоатация
 Инструкция по эксплуатации
 取扱説明書
 사용설명서
 使用说明书

BCV 300



Type 1
with integrated filter

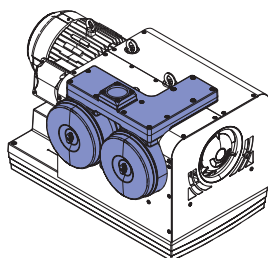

Type 2
without filter
for external filtration

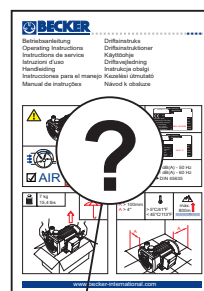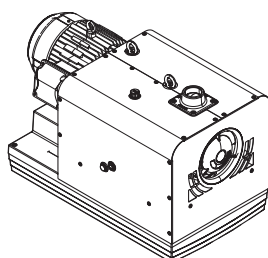

www.becker-international.com

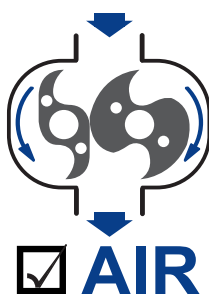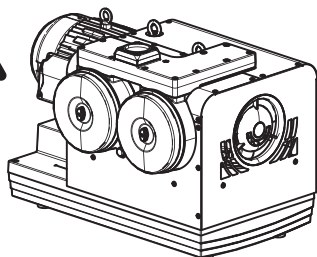

**MAX.
VACUUM**

BECKER	
D-42279 Wuppertal	
www.becker-international.com	
CE	type _____
frequency	_____ Hz
speed	_____ min ⁻¹
power required	_____ kW
inlet capacity	_____ m ³ /h
max. vacuum	MAX. VACUUM mbar


mbar



MAX.

BECKER	
D-42279 Wuppertal	
www.becker-international.com	
CE	type _____
frequency	_____ Hz
speed	_____ min ⁻¹
power required	_____ kW
inlet capacity	MAX. V m ³ /h
max. vacuum	_____ mbar


m³/h






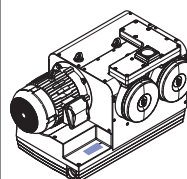


$L_{pA} = 69 \text{ dB(A)} - 50\text{Hz}$

$L_{pA} = 72 \text{ dB(A)} - 60\text{Hz}$

$K_{pA} = 3 \text{ dB(A)}$

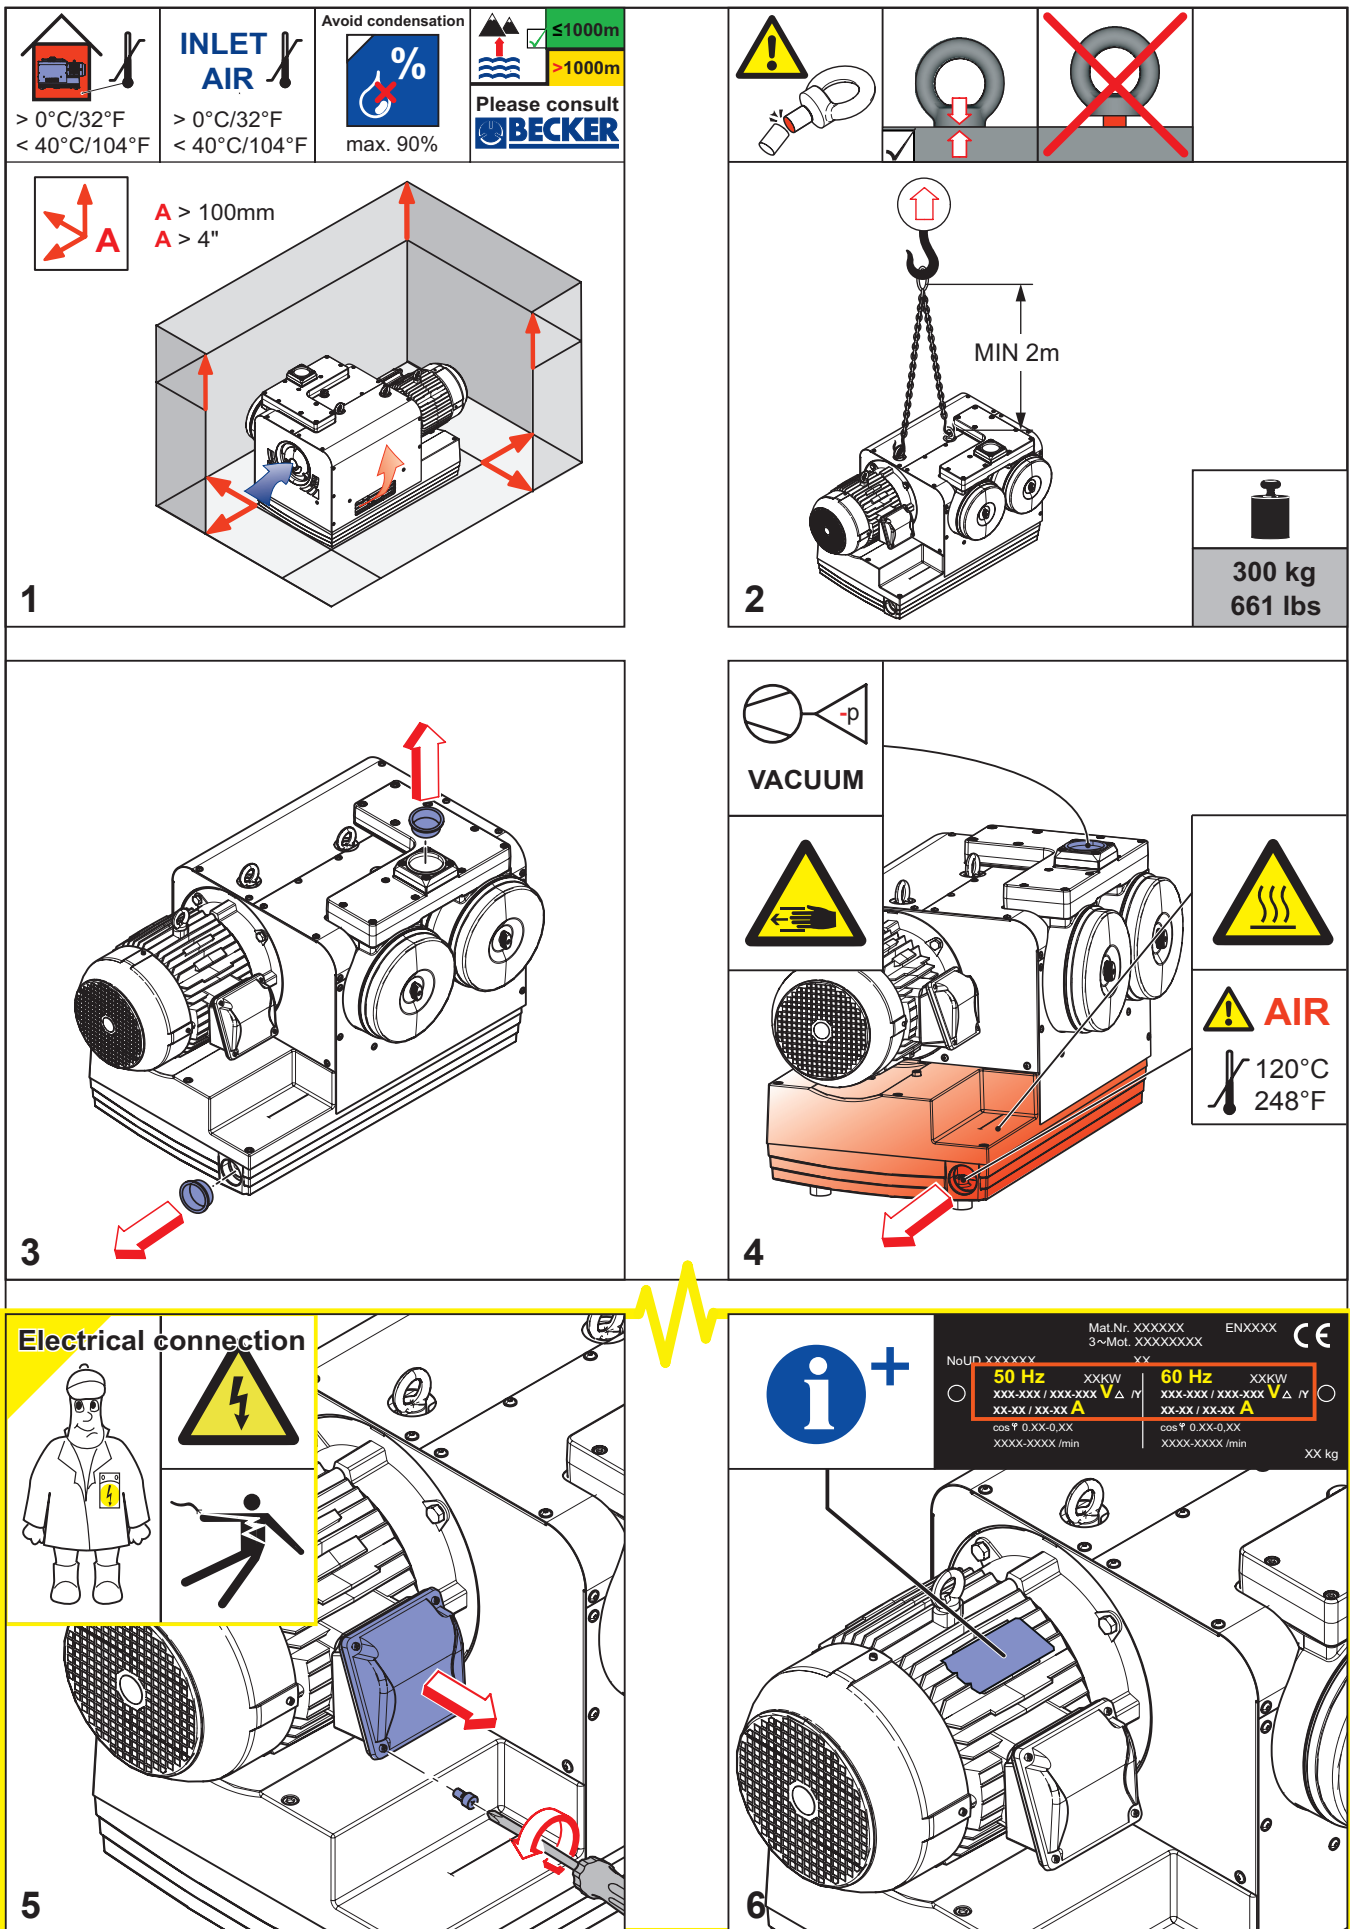

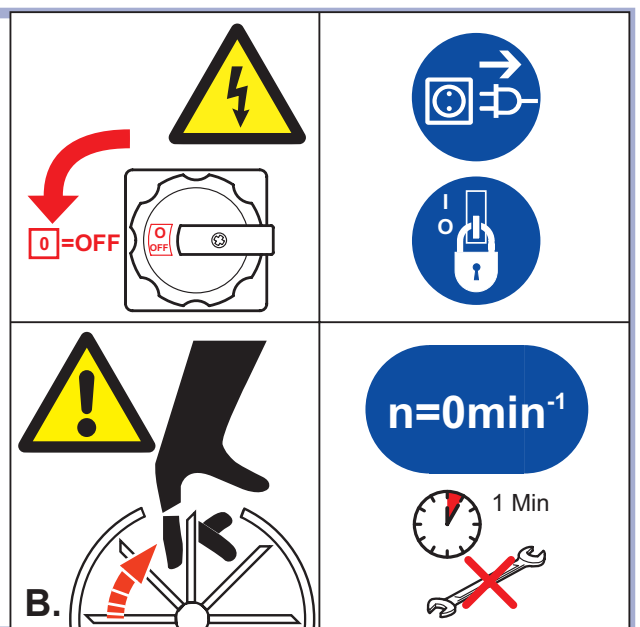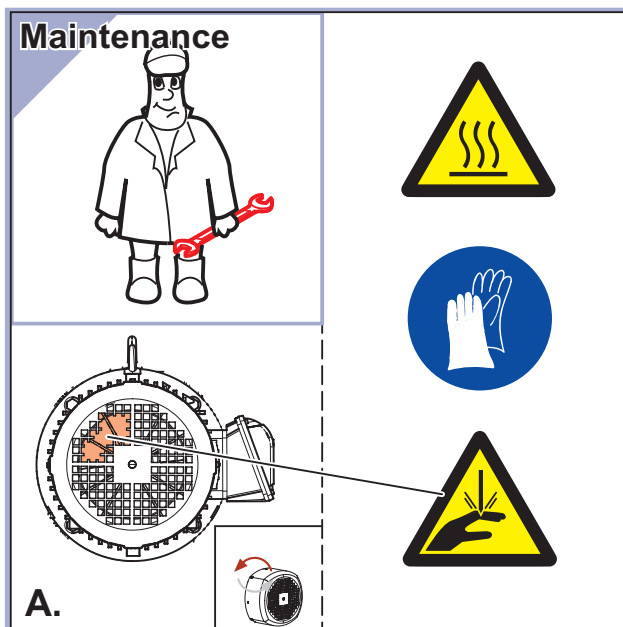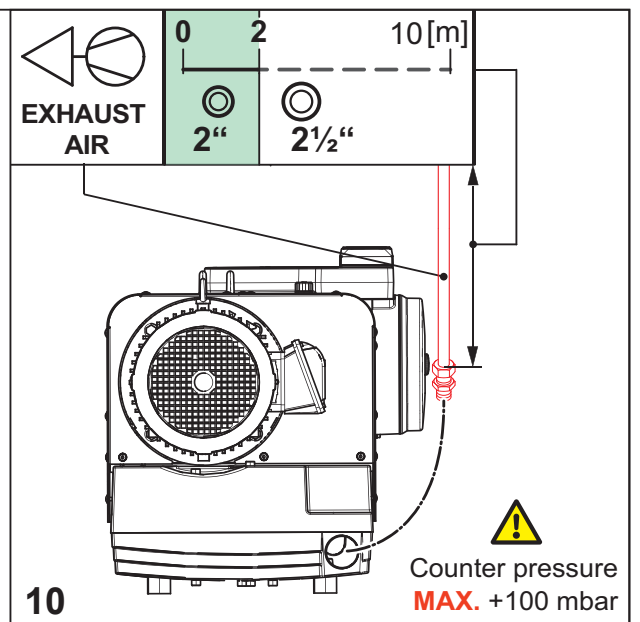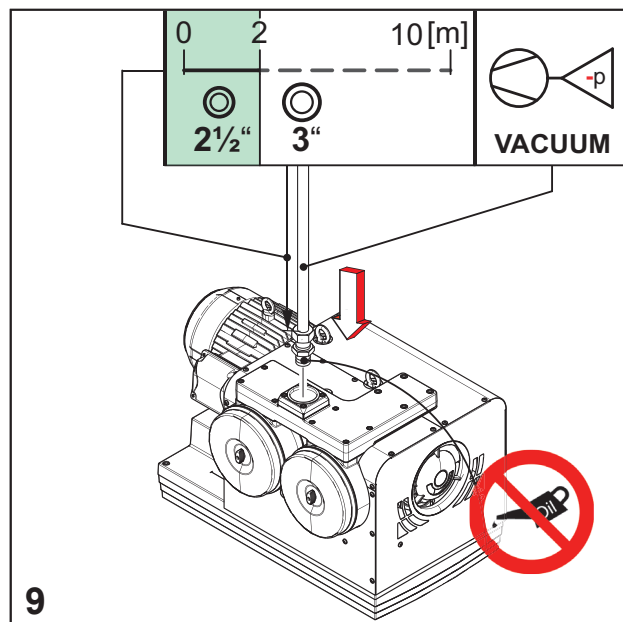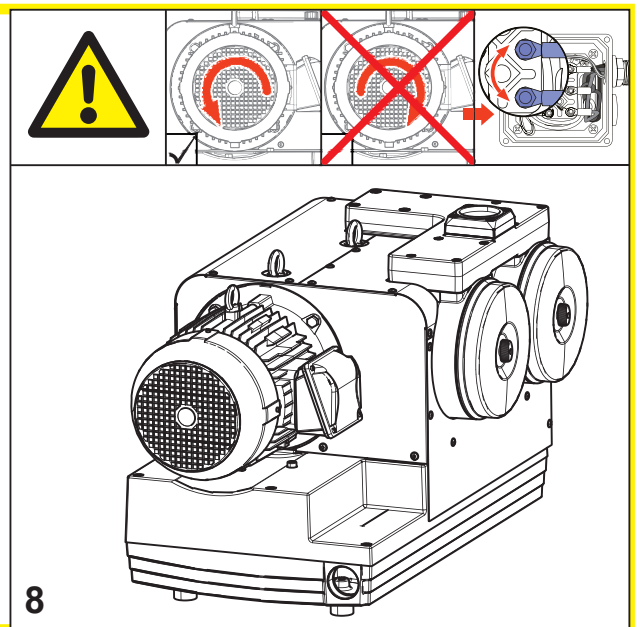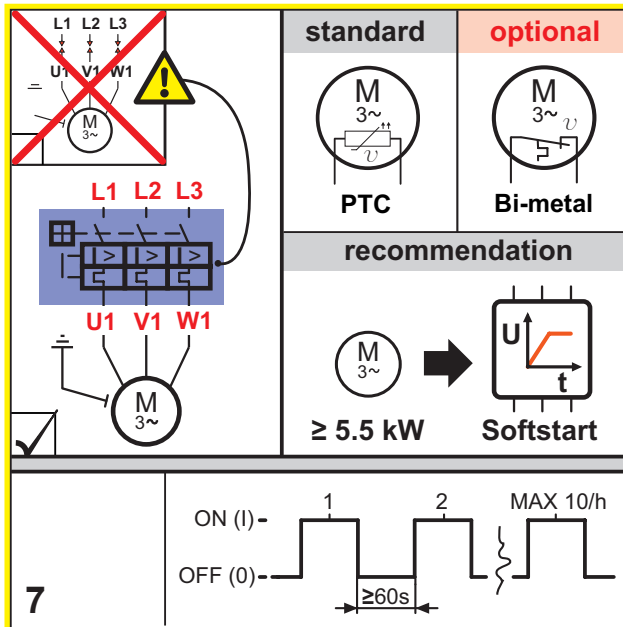

MAX

MIN

check regularly

4x/year

!

< MIN

Oil

Becker Lube

G 150

OFF

C.1

operating hours

20.000 MAX

or

3 years

OIL

Ambient temp. !

Operating hours

OIL

C.2

Oil

1.0 Liter

!

MAX

BECKER LUBE G 150

1.0 Liter → No.: 96003600100

5.0 Liter → No.: 96003600200

C.3

40 - 200 h

40h

200h

AMBIENT

AIR ?

EN149 - FFP3

42 CFR 84 - N100

D.

40 - 200 h

40h

200h

INTAKE

AIR ?

MIN

1x/a

E.

F1

2x No.: 90950065200 (PAPER)

2x No.: 90950165200 (POLYESTER)

F.



Gebr. Becker GmbH
Hölker Feld 29-31
D-42279 Wuppertal
info@becker-international.com



www.becker-international.com