


BETRIEBSANLEITUNG
OPERATING INSTRUCTIONS
INSTRUCTIONS DE SERVICE
ISTRUZIONI D'USO
HANDLEIDING
INSTRUCCIONES PARA EL MANEJO
MANUAL DE INSTRUÇÕES
NAUDOJIMOSI INSTRUKCIJA
KASUTUSJUHEND
LIETOŠANAS INSTRUKCIJA
DRIFTSINSTRUKS
DRIFTSINSTRUKTIONER
DRIFTSVEJLEDNING
INSTRUKCJA OBSŁUGI

KEZELÉSI ÚTMUTATÓ
NÁVOD K OBSLUZE
NAVODILO ZA UPORABO
NÁVOD NA OBSLUHU
UPUTE ZA RAD
MANUAL DE OPERATII
TREORACHA OIBRIÚCHÁIN
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EL KITABI
ИНСТРУКЦИИ ЗА ЕКСПЛОАТАЦИЯ
ИНСТРУКЦИЯ ПО ЕКСПЛОАТАЦИИ
取扱説明書
사용설명서
使用说明书

VTLF 2.400

VTLF 2.500

MAKE IT BECKER.

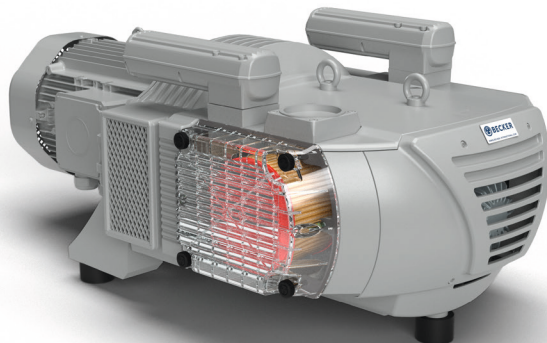

1

<p>MAX. VACUUM</p> <p>MAX.</p>		<p>mbar</p>
		<p>m³/h</p>
<p>L_{pA})))</p> <p>DIN EN ISO 11203 Accuracy Class 2 $K_{s,A} = 3 \text{ dB(A)}$ $r = 1\text{m}$</p>	<p>$L_{pA} = 77-79 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 79-80 \text{ dB(A)} - 60\text{Hz}$</p>	<p>2</p>

			<p>350-370 kg 772-816 lbs</p>
<p>MIN 2x ☉</p>			<p>1</p>

<p>$A > 400\text{mm}$ $A > 16''$</p>	<p>$> 5^\circ\text{C}/41^\circ\text{F}$ $< 45^\circ\text{C}/113^\circ\text{F}$</p>	<p>max. 90%</p>	<p>max. 800m</p>
4			

<p>No. 2</p>	
<p>5 mm 6 mm</p>	
<p>13 mm</p>	

5

6

BECKER MADE IN GERMANY EN60000 CE

50 Hz 3000W 1 60 Hz 3000W

3000000 / 1000000 V_A / h 3000000 / 1000000 V_A / h

22.000 RPM / A 22.000 RPM / A

max F 5.000.00 max F 5.000.00

3000.0000 mm 3000.0000 mm 300 kg

7

GENERAL

ADDITIONAL $M \geq 5.5 \text{ kW}$

¹⁾ motor protection switch

RECOMMENDATION

A

Softstart

B

ON (I) -

OFF (0) -

MAX 6x/h

OPTIONAL

PTC

Bi-metal

8

8

9

10

0 2 3 10[m]

4" 4" 5" + 1x

VACUUM




11

AIR


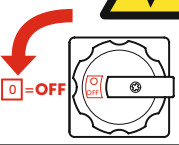






>100°C
>212°F

12


Maintenance

13


14




CLEANING INTERVAL

40h


200h





EN149 - FFP3
42 CFR 84 - N100

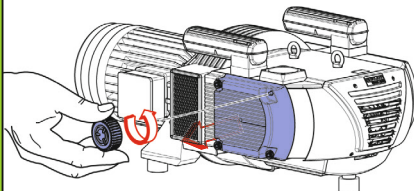

15

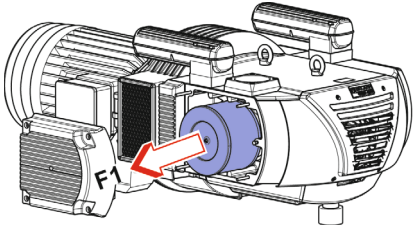

16

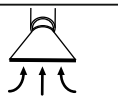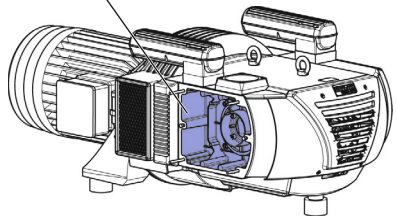17






F1: D: 217 mm
H: 146 mm
No.: 9095970000




EN149 - FFP3
42 CFR 84 - N100


18

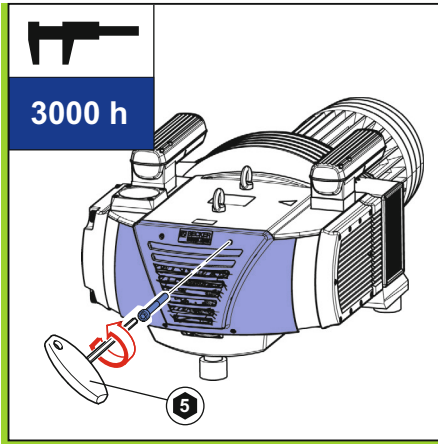


19

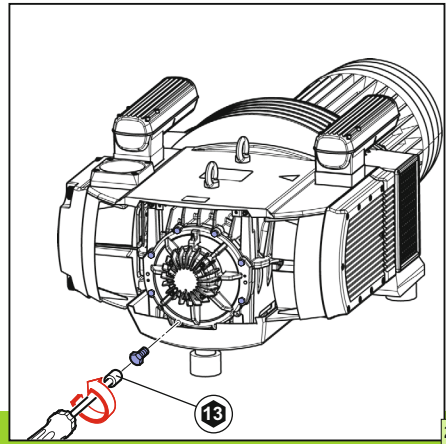


20

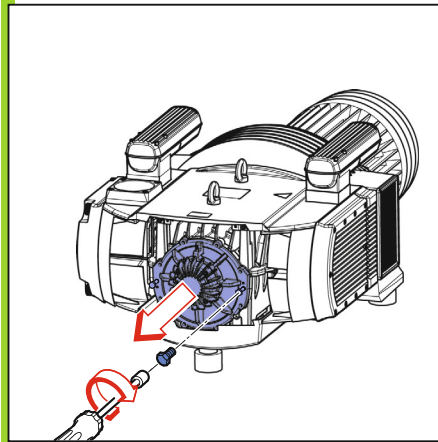


21

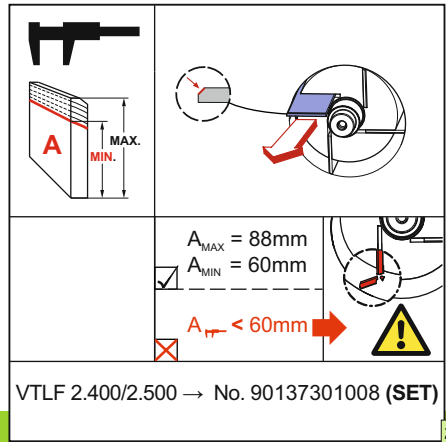



22

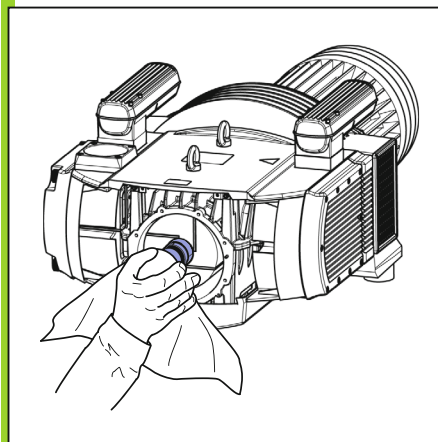

23

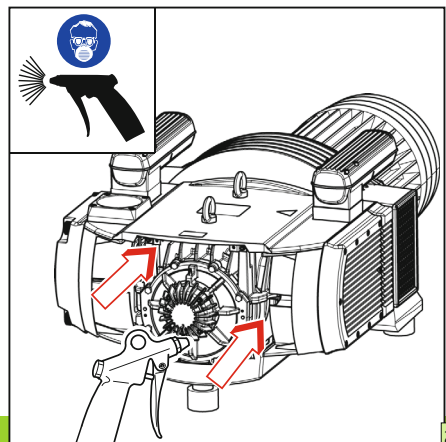

24

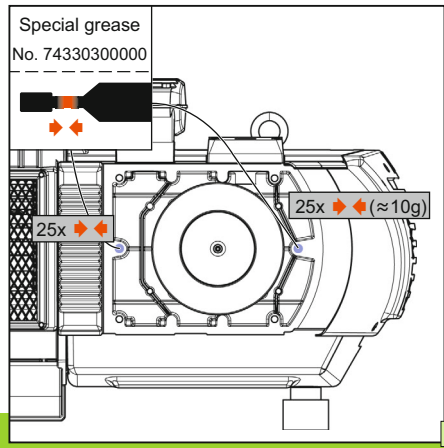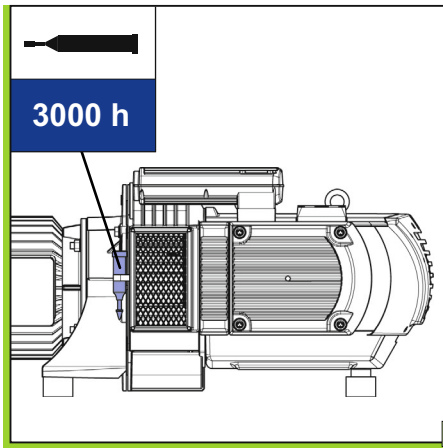



29



WWW.BECKER-INTERNATIONAL-SHOP.COM

Gebr. Becker GmbH
Hoelker Feld 29-31
42279 WUPPERTAL
GERMANY
info@becker-international.com
www.becker-international.com





MAKE IT BECKER.

28100052302 | 2021-12-09 | All rights reserved