


BETRIEBSANLEITUNG
OPERATING INSTRUCTIONS
INSTRUCTIONS DE SERVICE
ISTRUZIONI D'USO
HANDLEIDING
INSTRUCCIONES PARA EL MANEJO
MANUAL DE INSTRUÇÕES
NAUDOJIMOSI INSTRUKCIJA
KASUTUSJUHEND
LIETOŠANAS INSTRUKCIJA
DRIFTSINSTRUKS
DRIFTSINSTRUKTIONER
DRIFTSVEJLEDNING
INSTRUKCJA OBSŁUGI

KEZELÉSI ÚTMUTATÓ
NÁVOD K OBSLUZE
NAVODILO ZA UPORABO
NÁVOD NA OBSLUHU
UPUTE ZA RAD
MANUAL DE OPERATII
TREORACHA OIBRIÚCHÁIN
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EL KITABI
ИНСТРУКЦИИ ЗА ЕКСПЛОАТАЦИЯ
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
取扱説明書
사용설명서
使用说明书


DTLF 2.250/X-4XX DXLF 2.250/X-4XX

MAKE IT BECKER.

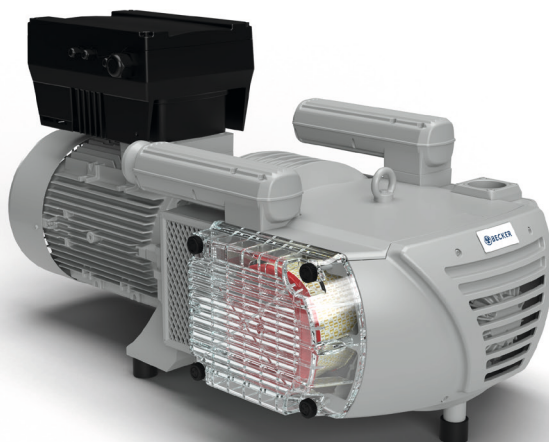


VARIAIR
UNIT




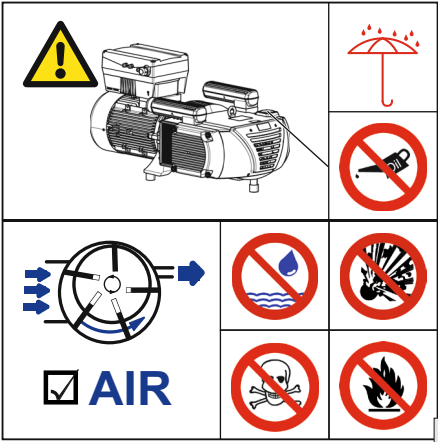


1

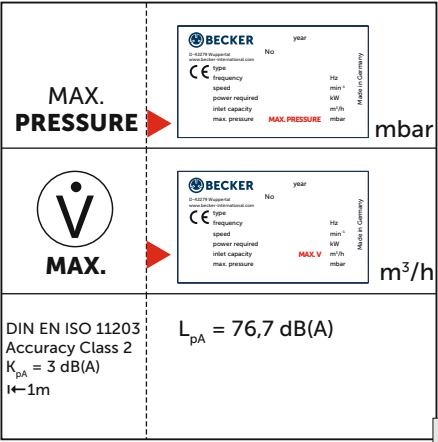


2

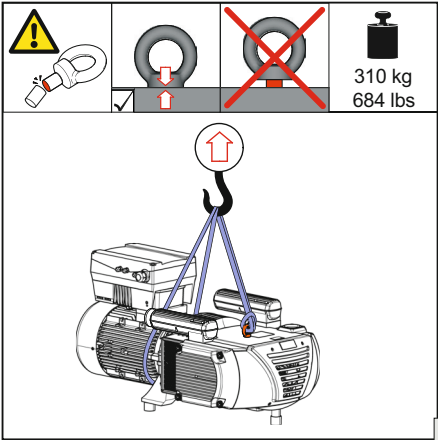


3

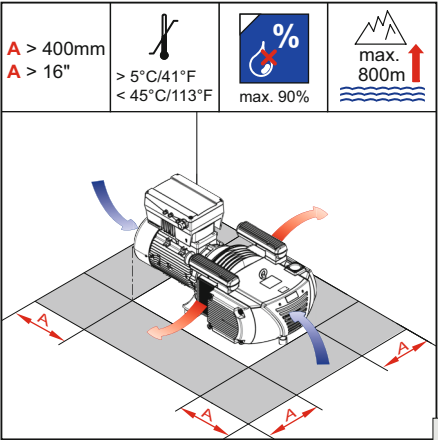


4

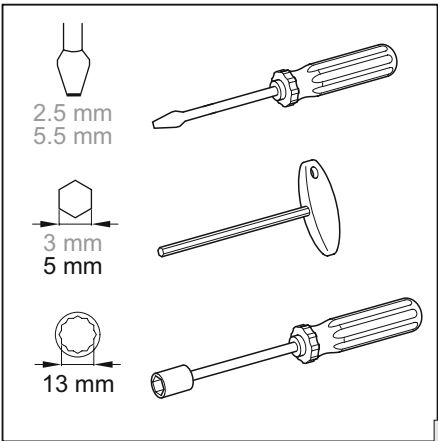


5

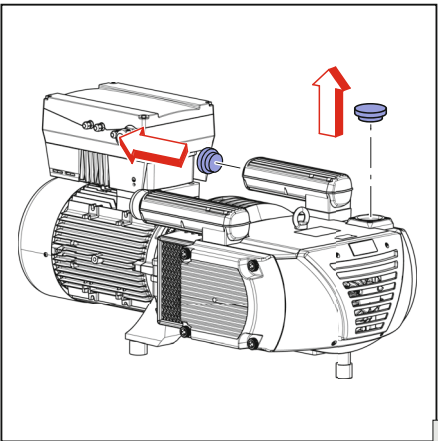


6

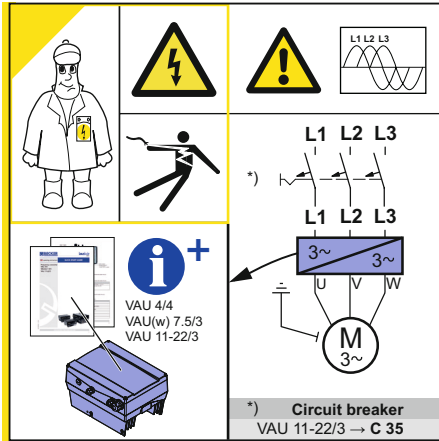


7

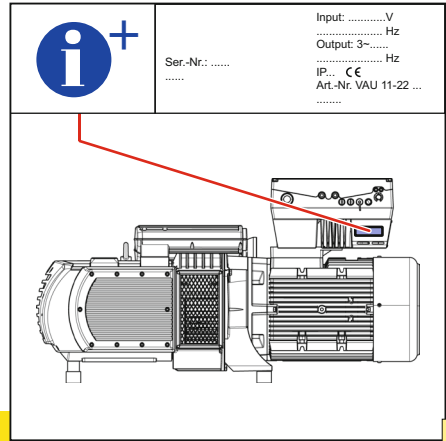


8

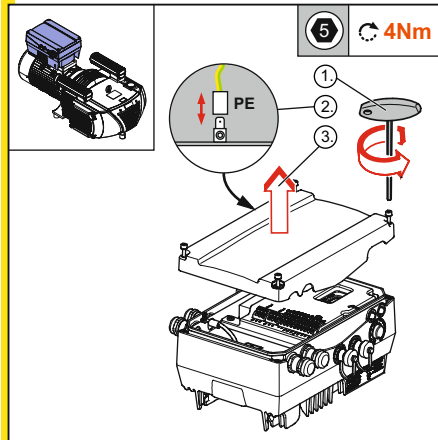


9

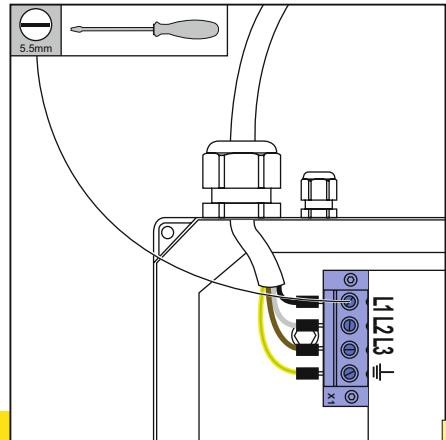


10

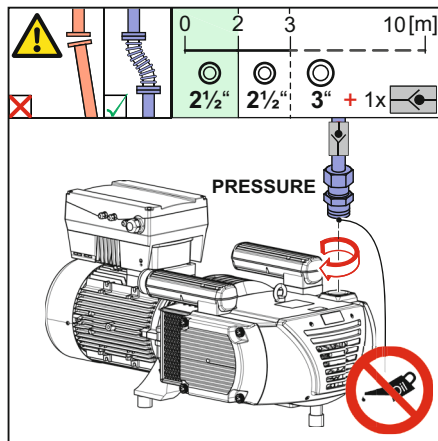


11

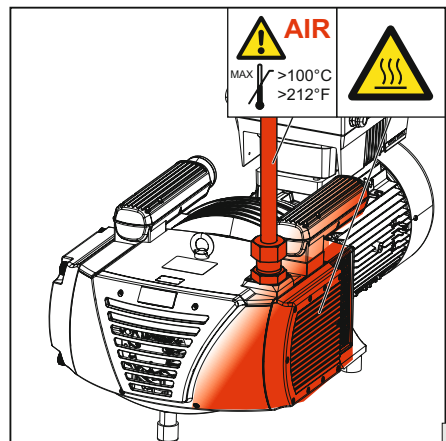


12

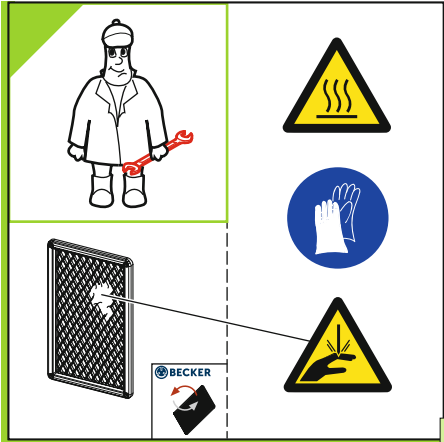


13

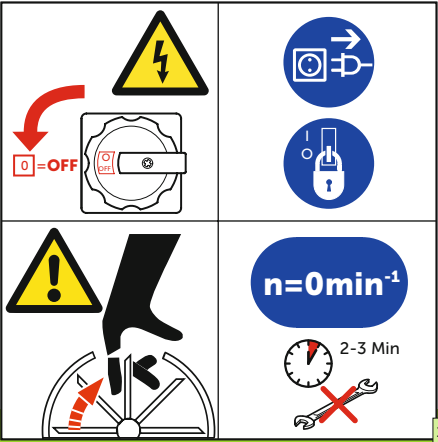


14

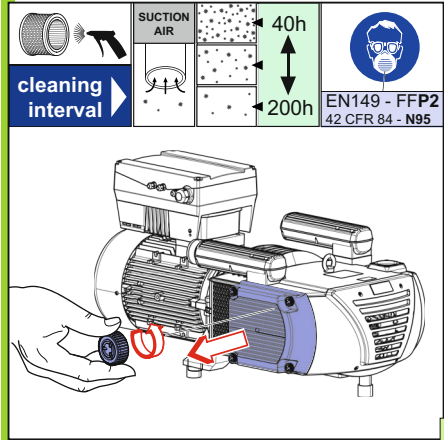

15

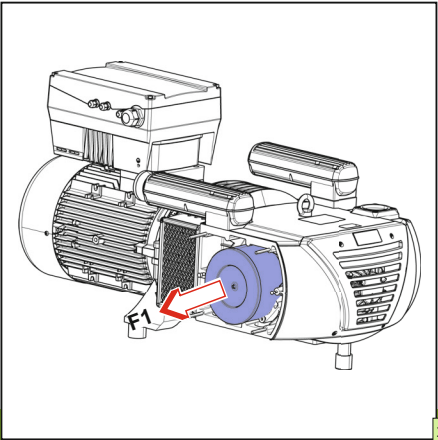

16

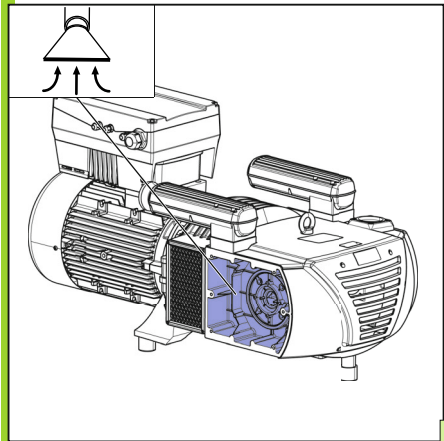


17




18

F1: D: 218 mm
H: 122 mm
No.: 90951200000


EN149 - FFP2
42 CFR 84 - N95

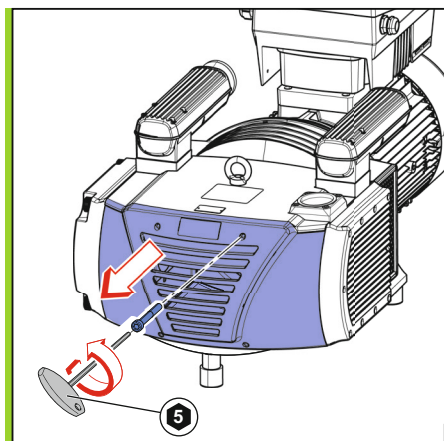



19

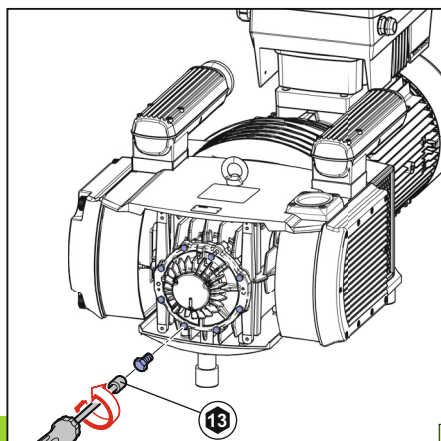


20

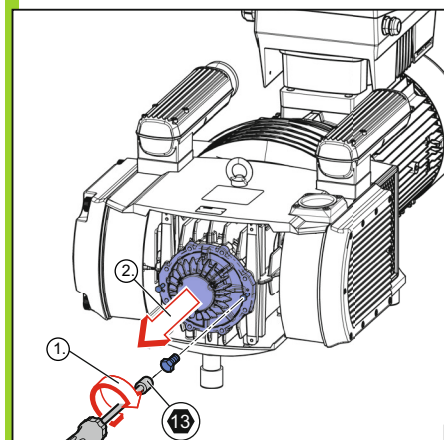


21

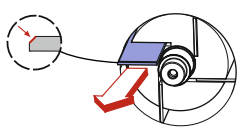  3000 h	
	DTLF 2.250/0-4XX $A_{MAX} = 65mm$ $A_{MIN} = 41mm$ $\boxtimes A_{MIN} < 41mm$ → 
DTLF 2.250/0-4XX → No. 90136701005 (SET)	




22

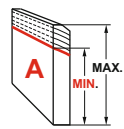
 7500 h	 DXLF 2.250/0-4XX $A_{MAX} = 64mm$ $A_{MIN} = 41mm$ $\boxtimes A_{MIN} < 41mm$ → 
	
VXLF 2.250/0-4XX → No. 90132500005 (SET)	

23

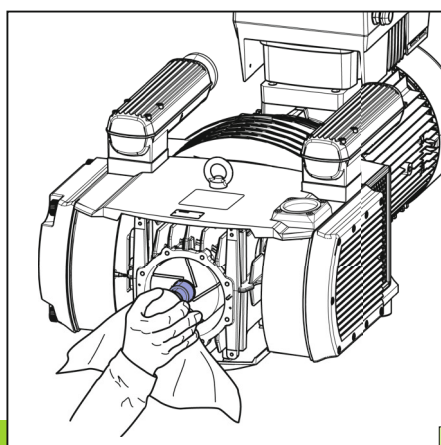

24

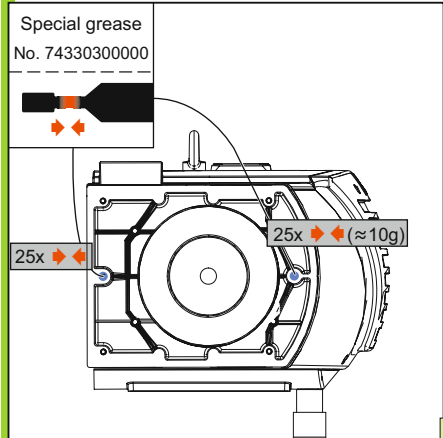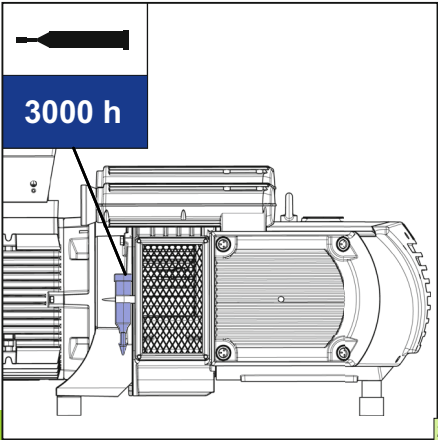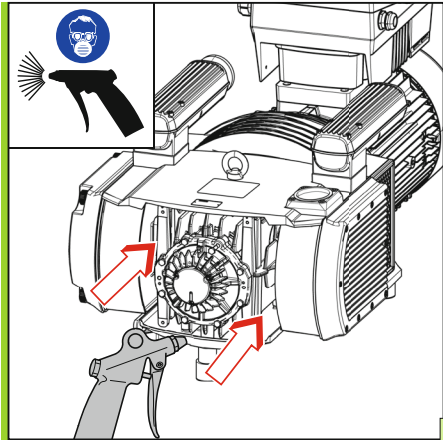

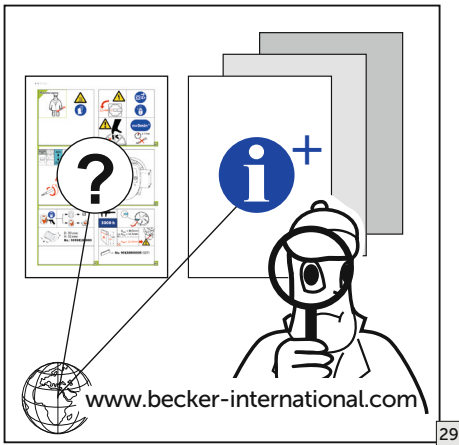

WWW.BECKER-INTERNATIONAL-SHOP.COM

Gebr. Becker GmbH
Hölker Feld 29-31
42279 WUPPERTAL
GERMANY
info@becker-international.com
www.becker-international.com





MAKE IT BECKER.